

Miller Relief Step

Description

The Miller 9099 Relief Step is designed to relieve suspension trauma after a fall arrest. OSHA states that suspension trauma can occur within minutes after a fall, while waiting for rescue. The average fall rescue time is 15 minutes. The Relief Step provides support and helps blood circulation until rescue. Small and lightweight, the Relief Step attaches to any brand or style full-body harness.

Materials


Webbing:	Polyester
Buckles:	Zinc plated steel
Sleeve:	PVC heat shrinkable tubing
Thread:	Polyester
Button Snap:	Steel



* The 9099 Relief Step is a one-time use device. Once it has been activated, it must be replaced with a new unit.

Technical

Weight:	0.15 lbs. (0.68 kg)
Max Working Load:	400 lbs. (181.44 kg)
Max. Length:	43 in. (1.09 m)

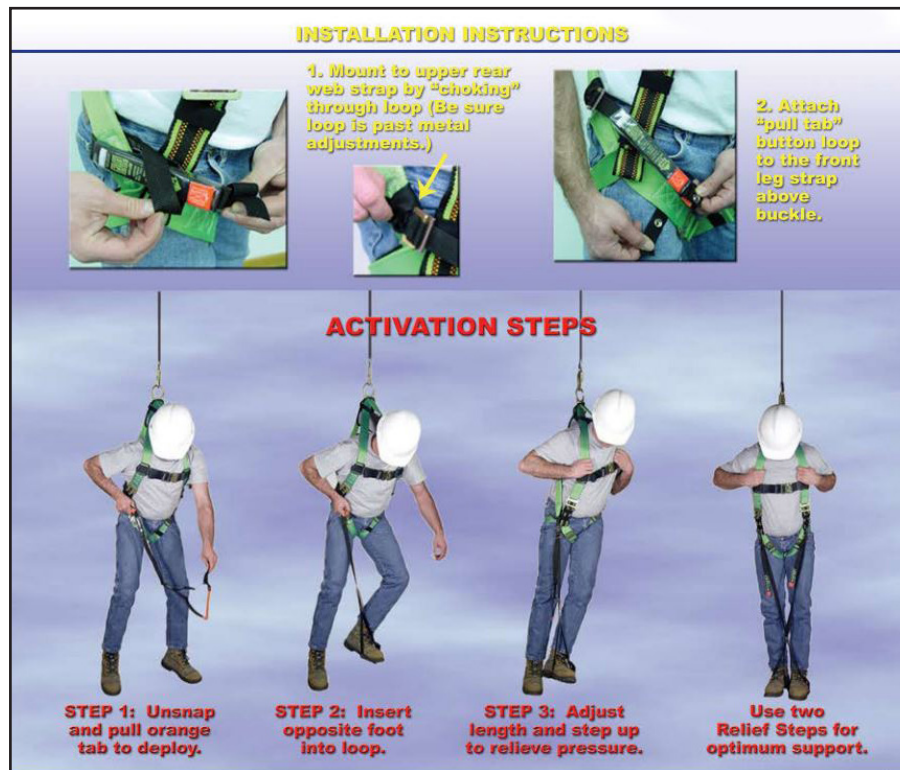

Limitless Possibilities. Ask the Expert.
Technical Service: 800.873.5242
www.millerfallprotection.com

Honeywell Industrial Safety
900 Douglas Pike
Smithfield, RI 02917

USA
Phone: 800.430.5490
Fax: 800.322.1330

Canada
Phone: 888.212.7233
Fax: 888.667.8477

! This equipment should only be used after reading and understanding the manufacturer's instructions. Failure to follow instructions could result in serious injury or fatality.