

TECHNICAL DATA

Fluke t3000 FC Wireless Temperature Kit



Key features

The Fluke FC Wireless t3000 Temperature Kit provides measurement of many common electrical parameters, and lets you correlate these with temperature readings

The Fluke 3000 FC Series Wireless Multimeter with the Fluke Connect® app has all the essentials for convenient test and measurement troubleshooting:

- AC and DC voltage measurements to 1000V
- AC and DC current with 0.01 mA resolution
- Continuity, resistance, diode test, capacitance and frequency measurements
- MIN/MAX recording
- CAT III 1000 V, Cat IV 600 V; IP54

With the Fluke t3000 FC Wireless K-Type Temperature Module you can:

- Use as a standalone meter or as part of the system
- Logging function for recording and saving up to 65,000 readings

Product overview: Fluke t3000 FC Wireless Temperature Kit

The Fluke FC Wireless t3000 Temperature Kit is part of the Fluke Connect team of wireless test tools

Connect the t3000 FC Wireless Temperature Module to your test point, and view the results up to 20 meters away on the 3000 FC Wireless Digital Multimeter.


You'll save time, with less run-around collecting multiple measurements. Use multiple modules for measurements on three-phase systems, as a stand-alone measurement tool or combine with other Fluke Connect® modules as a system for multiple measurements.

From short distances, you can even view readings from modules through closed electrical panels. Plus no more writing down data as the Fluke Connect remote modules capture up to 65,000 sets of time stamped min/max/avg readings, using the optional PC adapter. Fluke Connect wireless test tools also offer increased safety by letting you view readings in a separate location from the test point.

Now you can take readings on moving machinery, with only the measurement module in harm's way.

Specifications: Fluke t3000 FC Wireless Temperature Kit

Ordering information

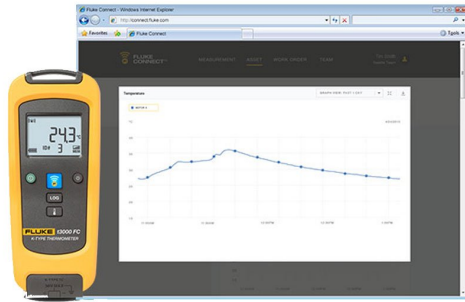

FLK-T3000 FC Kit

Fluke t3000 FC Wireless Temperature Kit
80PK-1 K-Type Bead Thermocouple

Includes:

- Fluke 3000 FC Series Wireless Multimeter
- Fluke t3000 K-Type Thermocouple Thermometer
- TL175 Test Leads
- AC175 Alligator Clips
- Other K-Type temperature probes also available
- Magnetic hanging strap



Preventive maintenance simplified. Rework eliminated.

Save time and improve the reliability of your maintenance data by wirelessly syncing measurements using the Fluke Connect® system.

- Eliminate data-entry errors by saving measurements directly from the tool and associating them with the work order, report or asset record.
- Maximize uptime and make confident maintenance decisions with data you can trust and trace.
- Access baseline, historical and current measurements by asset.
- Move away from clipboards, notebooks and multiple spreadsheets with a wireless one-step measurement transfer.
- Share your measurement data using ShareLive™ video calls and emails.

Find out more at flukeconnect.com



All trademarks are the property of their respective owners. WiFi or cellular service required to share data. Smartphone, wireless service and data plan not included with purchase. First 5 GB of storage is free. Phone support details can be viewed at fluke.com/phones.

Smart phone wireless service and data plan not included with purchase. Fluke Connect is not available in all countries.